





PART # 20120 HEDDER BRACKET INSTRUCTIONS

STOCK BRACKET REMOVAL

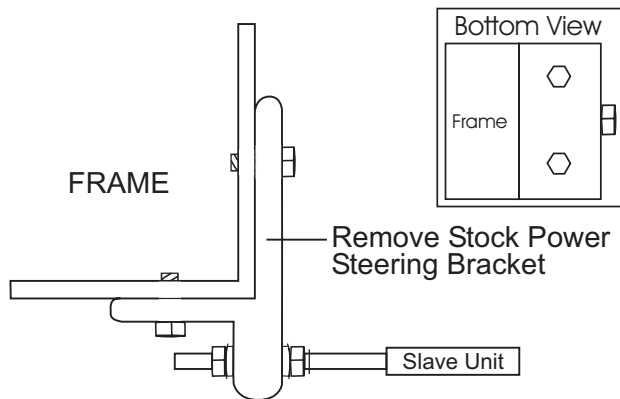

1. Remove nuts and gromets (examine, if still good keep for reinstallation of slave unit).
2. Remove stock power steering RAM bracket from frame (3 bolts.)

NEW BRACKET INSTALLATION

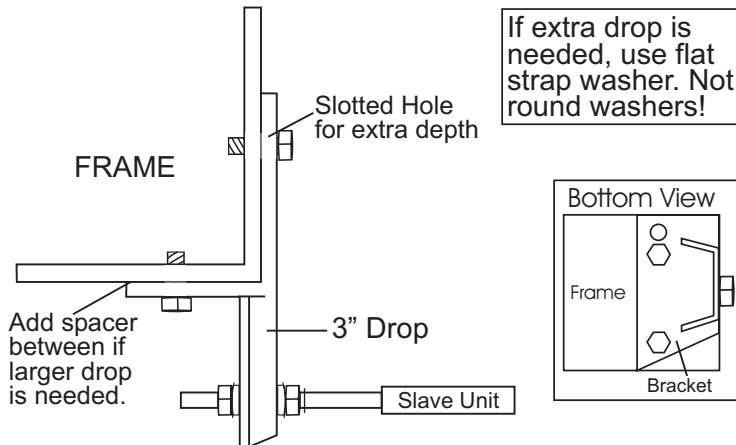

1. Install part #20120 bracket into same location as stock part, using 3 bolts.
2. Install slave unit, using nuts and gromets removed earlier.
3. If you need a larger drop add spacer where indicated above.

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515
website: www.hedman.com • email: techsupport@hedman.com